



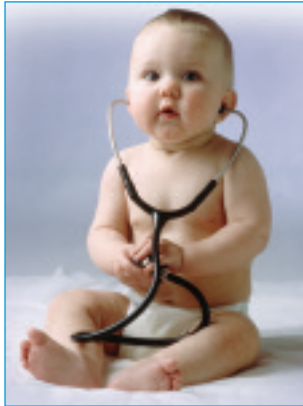

MonoSol
inspiring material solutions

Aquafilm® for a safe and healthy medical environment

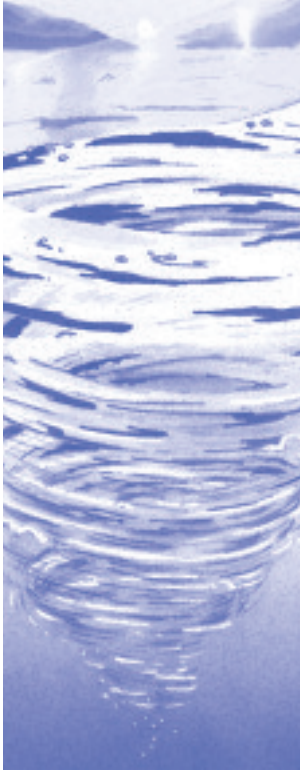

In medical environments, health and safety is paramount.

Whether handling linen, clothing or instruments, it is vital to eliminate the risk of cross infection to staff and patients.

The Aquafilm range of products help meet Duty of Care Guidelines HSG (95) 18 by ensuring the safe isolation, transportation and disinfection of foul and infected linen.



AQUAFILM™

THE DISAPPEARING LAUNDRY BAG

Aquafilm Soluble Laundry Bags are totally soluble and biodegradable. Contaminated linen is placed in the bag; the bag is then sealed with its cold water soluble pink tie ready for transfer to the laundry, where it is placed unopened into the washer.

As the wash progresses, the laundry bag disperses into solution.

The Aquafilm Plus range features the same properties as the standard Aquafilm bag with the added feature of a higher resistance to moisture and dampness, ideal for those hospital areas which have much wetter linen to deal with.

Aquafilm Soluble Laundry Bags are hot water soluble and suitable for washes at 65°C and above.

They are not suitable for use in domestic washing machines.

Bags are supplied on a roll of 25, in a polythene re-sealable dispenser.

Each box contains 4 packs of 25 printed in 5 languages: English, Japanese, Spanish, Italian and French.


Aquafilm Soluble Laundry Bags

SIZE	PRODUCT CODES			
	CLEAR BAGS		RED BAGS	
	PLAIN	PRINTED	PLAIN	PRINTED
660mm x 840mm	LH001 (MVF501)	LH042 'Infected Linen Only'	LH020 (MVF056)	LH004 'Foul and Infected Linen Only'
711mm x 990mm	LH005 (MVF042)	LH002 (MVF059) 'Infected Linen Only'	N/A	LH006 (MVF060) 'Aquafilm Water Soluble'
914mm x 990mm	LH065 (MVF024)	LH021 (MVF025) 'Aquafilm Water Soluble'		

Aquafilm Plus

SIZE	PRODUCT CODES	
	CLEAR BAG	RED BAG
660mm x 840mm Printed 'Aquafilm Plus'	LP032	LP040 (MVF066)
660mm x 840mm Printed 'Foul and Infected Linen Only'	N/A	LP045
711mm x 990mm Printed 'Aquafilm Plus'	LP039	LP042 (MVF063)

*MVF CODES ARE NHS PRODUCT CODES

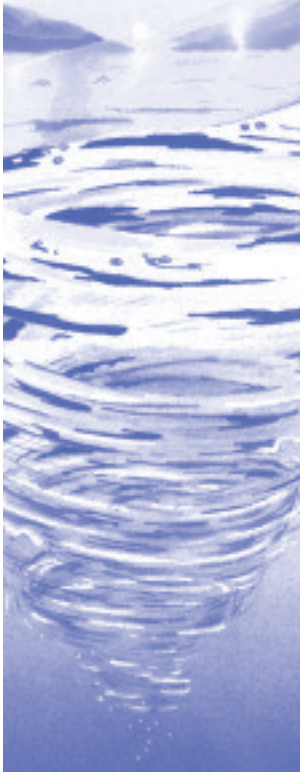

dissolvo sack™

The Aquafil Dissolvo Sack is a soluble membrane laundry bag, with added protection of an overlapped slit protecting the soluble membrane from contact with damp linen inside the bag.

The filled Dissolvo Sack is placed sealed into the washing machine.

During the initial wash the soluble membrane dissolves along with the tie tape,

releasing the contents of the bag for processing.

At the end of the wash cycle the linen is removed for drying and the Dissolvo Sack – now a clean, disinfected sheet of film – is removed and discarded.

The Dissolvo Sack is ideal for nursing and residential homes, and suitable for hot and cold washes.



Self Closing Sack Stand also available.

Dissolvo Sack

SIZE	PRODUCT CODES			
	CLEAR BAG	RED BAG	WHITE BAG	GREEN BAG
711mm x 760mm	DS006	DS002	DS008	DS004
711mm x 990mm	DS018 (MVF009)	DS014 (MVF004)	DS020 (MVF006)	DS012 (MVF008)

***MVF CODES ARE NHS PRODUCTS CODES**

Standard printed warning notices are also available

dissolvo

sack™

The Patients Clothing Bag is a soluble membrane laundry bag ideal for containing clothing destined for home washing or single garment laundering in hospitals.

Clothing is placed into the bag and the bag sealed with the attached pink tie tape, this eliminating any unnecessary handling of soiled or infected garments and reducing any unpleasant odours.



Suitable for both hot and cold washes, the Patient Clothing Bag is placed unopened into the washing machine. During the initial wash cycle the soluble membrane and the tie tape dissolve releasing the contents of the bag for washing. Once the wash cycle is complete the Patients Clothing Bag is removed and discarded.

The Patients Clothing Bag is white in colour, designed to conform to HSG (95) 18, with easy to follow instructions for use printed on each bag. Bags are available in compact dispenser boxes of 100 bags.



Patients Clothing Bag

SIZE	PRODUCT CODE
406mm x 559mm	DS200 (MVF010)

*MVF CODES ARE NHS PRODUCTS CODES

MonoSol 
inspiring material solutions

MonoSol has manufactured film products based on water soluble polymers since its founding in 1953. As the world's leader in water soluble film, MonoSol has the capability to offer both extruded and solution cast production methods offering the most advanced range of films available.

Product ranges include specialist films designed for innovative packaging solutions, composite applications, sheet goods fabrication, as well as infection control purposes and embroidery. MonoSol continuously strives to provide customers with superior service and products while continuously developing and improving film formulations to offer customers the very best in water soluble films.

Today the MonoSol group comprises MonoSol LLC and MonoSol AF Ltd. The manufacturing facilities are located respectively in Portage, Indiana, USA and in Worcestershire, UK.



MonoSol, LLC

1701 County Line Road, Portage, Indiana 46368 USA

Tel: +1 (219) 762 3165 **Fax:** +1 (219) 763 4477

MonoSol AF, Ltd

Unit 313 Oak Drive, Hartlebury Trading Estate,
Hartlebury, Worcs. DY10 4JB UK

Tel: +44 (0)1299 251335 **Fax:** +44 (0)1299 251601

e-mail: film@monosol.com www.monosol.com